



Manual

C965



Functions & feature

Functions

1. Speed meter (0~99.9Km/h/MPH)
2. Trip (0~99999.9Km/Mile) (reset from 0)
3. ODO (0~99999.9Km/Mile) (restart from 0)
4. AVG SPEED (0~99.9Km/h/MPH) (reset from 0)
5. MAX SPEED (0~99.9Km/h/MPH) (reset from 0)
6. Time (0~99:59:59) (restart from 0 or reset from 0)
7. Temperature indicate
8. Power indicate
9. PAS level 0~3
10. 6Km walk
11. Battery indicator



Features:

1. Backlight brightness adjustable
2. Light sensitive
3. Buzzer remind
4. Low temperature warning
5. Maintain reminded
6. Error code indicator
7. Power indication (can be hide)
8. Product shell is ABS, transparent window is made with high strength Acrylic
9. 5-way button, very easy to operate
10. Water resistance IP65

Measuring and display function

LCD display see below: Functional Description



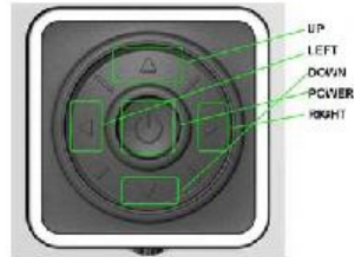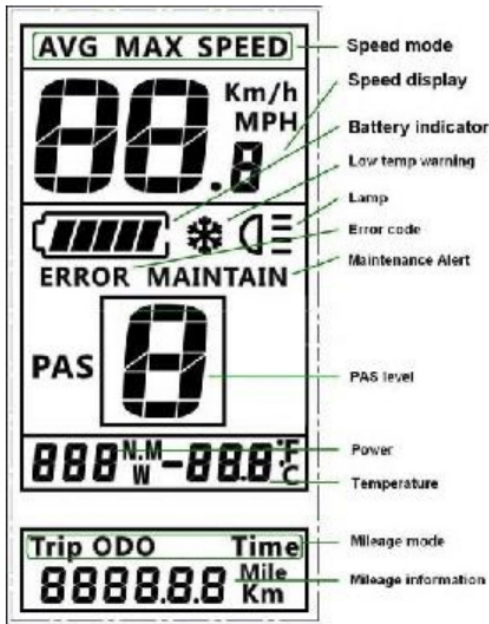

SPEED: The riding speed


AVG: Average speed, 0~99.9Km/h (MPH)


MAX: Maximum speed , 0~99.9Km/h (MPH)


Trip: Trip distance (0~99999.9Km/Mile)

ODO: Total distance (0~99999.9Km/Mile)

Time: The riding time


: Battery indicator; it will not fluctuate with the motor on/off.

: Show when the temperature is below freezing.

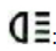: Headlamps & backlight indication, automatic work according to the external light.

ERROR: Error code indicator.

MAINTAIN: Indicate the maintain information according to the battery cycle times and ODO.

: PAS Level, 0~ 3, 0 for neutral.

888 w: Power indication (Battery output), can be hide by parameter setup.

-888 t: Temperature display. The range is -20°C~50 °C, higher than 50°C will display **HI**
Lower than -20°C will display **Lo**.

Operation:

1. **Power On/Off** : Press and hold **Power** button for 2 seconds can turn on/off the Meter.
2. **Speed mode switch**: Short press **LEFT** button can change the speed mode, Speed->AVG Speed->MAX Speed.

Note: If there is no operation for 5 seconds, the meter will return Speed (Real-Time) display automatically.

3. **Mileage mode switch**: Short press **RIGHT** button can change the mileage mode, Trip->ODO->Time.
4. **PAS operating**: Short press **UP/DOWN** button can change the PAS level from 0 to 3, 0 for neutral.

5. **Headlight/backlight On/Off**: Press and hold **UP** button for 2 seconds can turn on/off the headlight/backlight.

Note: At the automatic light sensor mode, press and hold the **UP** button can turn on the backlight / headlights. If automatic light sensor had opened the backlight / headlight, press and hold the **UP** button can't turn it off. You should close the automatic sensor first, and then turn off the light manually.

Note: The motor does not work when the battery voltage is low, meter still can keep the headlight on for a while when E-bike is in riding.

6. **6km walk** : Press and hold **DOWN** button can get into 6km walk mode, out of the mode when release the button.

Note: this function needs the support of controller.

7. **Data clean**: Press and hold **RIGHT** button for 2 seconds can cleanup several temporary data, the temporary data include **AVG Speed / MAX Speed / Trip / Time**.

Note: Meter will not erase these data when power off.

8. Parameter settings

Double press the **POWER** button (press interval less than 0.3 second), the Meter will get into the parameter setting state, current parameter flash. short press the **LEFT/RIGHT** buttons can switch the setting parameter, press the **UP/DOWN** buttons can change the parameter values, press the **POWER** button to save and exit the parameter setting state.

Warning: don't change the following parameters if you are not sure

- ◇ The location of speed display symbol **Wd**, this is the wheel diameter, wrong wheel diameter will cause speed abnormal.
- ◇ The location of speed display symbol **bU0**, this represent the battery parameter, wrong parameter can cause battery indication abnormal.

- 8.1 **Kilometer / Mile** : Get into parameter setting state, the location of speed icon display symbol **S7**, press the **UP/DOWN** button rotate display the symbol **km/h / MPH (Km / Mile)**, short press the **POWER** button to exit the parameter setting state.

- 8.2 °C/°F** : Get into parameter setting state, the location of speed icon display symbol **CF**, press the **UP/DOWN** button rotate display the symbol **°C / °F**.
- 8.3 Light sensitive** : Get into parameter setting state, the location of speed icon display symbol **bL0**, press **UP/DOWN** button display symbol **0-5**. **0** indicate automatic headlight/backlight OFF, **1-5** indicate automatic headlight/backlight ON. **1** indicates the brightest on(auto turn on the backlight at bright environment), **5** indicates the darkest on(auto turn on the backlight at dark environment).
- 8.4 Backlight brightness** : Get into parameter setting state, the location of speed icon display symbol **bL1**, press **UP/DOWN** button display symbol **1-5** to change the brightness of the backlight.
- 8.5 Buzzer** : Get into parameter setting state, the location of speed icon display symbol **bEP**, press the **UP/DOWN** button rotate display symbol **0/1**, **0** indicates buzzer off, **1** indicates buzzer on.
- 8.7 Auto off delay time** : Get into parameter setting state, the location of speed icon display symbol **OFF**, press the **UP/DOWN** button display symbol **1-9**, represent automatically shutdown delay time (minutes), default value is **5**.
- 8.8 Power display** : Get into parameter setting state, the location of speed display symbol **Pod**, press **UP/DOWN** button display symbol **0/1**, represent whether to show the power indicate on LCD.
- 8.9 Maintain reminded** : Get into parameter setting state, the location of speed icon display symbol **nnA(ma)**, press the **UP/DOWN** button rotate display symbol **0/1**, **0** represent maintain reminding off, **1** represent maintain reminding on.
- 8.10 Wheel diameter** : Get into parameter setting state, the location of speed icon display symbol **Wd**, press the **UP/DOWN** button can change this parameters as follows, **16/18/20/22/24/26/700C/28/29**. This is represent the wheel diameter, in units of inches.
- 8.11 Battery parameter** : Get into parameter setting state, the location of speed icon display symbol **bU0**, press the **UP/DOWN** button can change this parameters as follows, **24/36/UbE**. This is represent the Battery rated voltage, **UbE** means user define voltage.
- 8.12 Password** : Get into parameter setting state, the location of speed icon display symbol **PSd**, remind to input passwords, press **UP/DOWN** buttons to setup password value (0~9), press **LEFT/RIGHT** buttons to switch the password items. Passwords are 4 digit, default password is "1919". Press **POWER** button when password adjustment is completed. Meter will back to the **Voltage set** item if the password is wrong. Correct password will enter the **Speed limit set** item.
- 8.13 Speed limit set** : The location of speed display symbol **SPL**, the location of mileage display speed limit value, default value is 25km/h. Press **UP/DOWN** buttons to adjust the speed limit value, the minimum value is 10km/h, the maximum value is 99km/h.

10 seconds.

9. Maintain reminded (this function is optional)

The meter can remind maintain information, according to mileage (ODO) and battery cycle times.

- ◇ Meter will display symbol **MAINTAIN** when the ODO accumulated more than setting mileage (this parameter can be set by dealers), the mileage symbol will flash for 4 seconds when the meter power on, the buzzer beep for 2 seconds at the same time.
- ◇ Meter will display symbol **MAINTAIN** When the battery cycle over setting times, the symbol of battery will flash for 4 seconds when the meter power on, the buzzer beep for 2 seconds at the same time.

You can shutdown maintain reminding message by parameter setting. Parameter setting ->Maintain reminded (nnA) ->0

Trouble shooting

Black display: Temperature is too high or too low. Exposed too long in sunlight directly.

No Back-light or too dark: Reset the backlight brightness.

Error Code define

800U meter can warn the E-bike's error, show **error** icon and error code on LCD, error code definition see the table below.

Error Code	Error description	handle
1	Communication Error	Check cable connection
2	Controller protection	Check three-phase power line.
3	three-phase power error	Check three-phase power line connection
4	Battery low	Charge the battery
5	Brake error	Check the brake
6	Turn error	Check the turn
7	Speed Hall error	Check the Speed hall
other	Reserved	

Electrical Parameters

- ◇ 24V/36V battery supply
- ◇ Rated operating current : 10mA
- ◇ Max operating current : 30mA
- ◇ Off leakage current < 1uA
- ◇ Buzzer tone > 55db (20cm)

6



- ◇ Operating temperature : -18~60°C
- ◇ Storage temperature : -30~70°C

Precaution

1. This meter can be used in the rain but should not be started or used under water.
2. Don't leave the main unit exposed to direct sunlight when not riding the bike.
3. Check the communication of the meter the button periodically.
4. Don't disassemble the meter or the accessories.
5. Don't use thinner, alcohol or benzene to clean the meter or the accessories when they become dirty.
6. There is waterproof membrane inside the sound hole. Don't insert sharp object into the hole, it will causes waterproof failure.
7. Do not concentrate on meter while riding. Safety first.

